
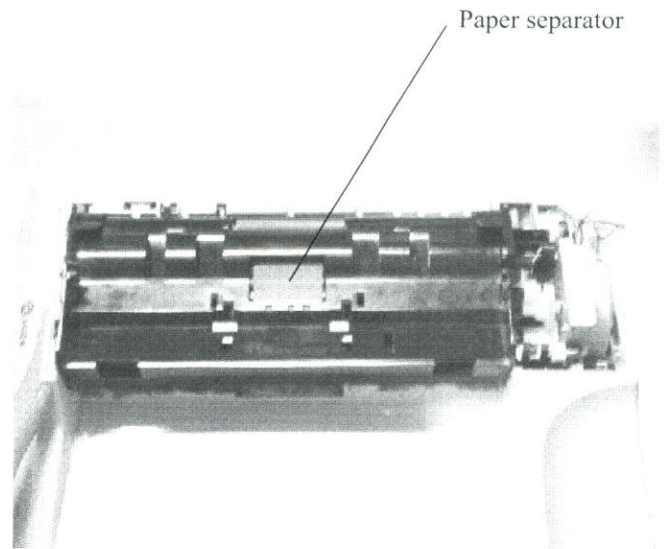


1.1.1 PAPER TRANSPORT ROLLERS

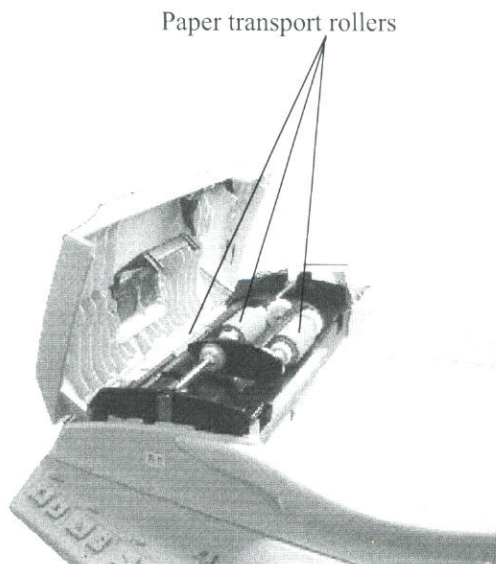

- Set the on/off switch to “O” (off).
- Open the ADF cover.

Clean the rollers of the document feeder and feed shafts, and also the two idler rollers located on the mobile part of the scanner, with a lint-free cloth moistened in isopropyl alcohol.

To clean them, rotate them in the same direction as during paper transport.

Recommended interval: 2 to 6 months, depending on utilization.

1.1.2 PAPER SEPARATOR MODULE

See illustration in § 1.1.1

- Set the on/off switch to “O” (off).
- Open the ADF cover.
- Disassemble the ADF feeder (see worksheet D8).
- Wipe the elements of the paper separator module with a lint-free cloth soaked with isopropyl alcohol.

Recommended interval: 2 to 6 months, depending on utilization.

